

















PARTS LIST

Fig. No.	Cord No.	Description	Unit	Remarks
1	011-1239	Rewind lever	1	
2	011-2563	Rewind lever shaft	1	
3	620-2552	Screw S.3-202552H	1	
4	011-1240	Friction spring.	1	
5	017-1394	Rewind knob	1	
6	017-2392	Wind lever mask	1	
7	011-2392	Wind lever screw	2	
8	011-1096	Friction clutch washer	1	
9	011-1097	Friction clutch spring	1	
10	017-1106	Wind lever	1	
11	017-1326	Shutter speed dial screw	1	
12	017-1018	Shutter speed dial name	1	
13	017-5017	ASA name	1	
14	627-2852	Scre: S73-172852H	3	
15	017-1016	ASA click claw	1	
16	017-1323	ASA click plate	1	
17	017-3507	speed dial spring	1	
18	017-1325	shutter speed dial	1	
19	026-6128	Accessory shoe cover	1	
20	017-1334	Accessory shoe	1	
21	021-2311	Accessory shoe stopper	2	
22	017-6029	Accessory shoe base assembly	1	
23	627-2052	Screw S73-173052H	4	
24	637-2855	Screw S81-172855H	1	
25	017-1333	Battery cap	1	
26	017-1001	Top cover assembly	1	
27	627-2555	Screw S73-172555H	3	
28	017-6011	Counter dial window	1	
29	017-1093	Back cover leatherette	1	
30	011-1174	Back cover assembly	1	
31	637-2853	Screw S81-172853H	2	
32	011-1176	Pressure plate assembly	1	
33	021-1036	Body light baffle	2	
34	011-1017	Body light baffle (side)	1	

35	011-1254	Latch cover leatherette	1
36	637-3553	Screw S81-173553H	2
37	011-1181	Latch cover	1
38	011-1180	Back cover latch	1
39	001-3516	Back cover latch spring	1
40	017-1095	Latch light baffle	1
41	017-1091	Front leatherette (Right)	1
42	017-1092	Front leatherette (Left)	1
43	011-1162	Bottom cover	1
44	657-6055	Screw S91-176055H	2
45	527-2555	Screw S73-172555H	2
50	017-1069	Synchro Contact base assembly	1
51	627-2852	Screw S73-172852H	2
52	017-2381	Meter set bar screw	2
53	017-1020	Meter set bar A	1
54	017-3521	Meter set bar B spring	1
55	017-2391	Meter set bar B screw	2
56	017-1021	Meter set bar B	1
57	017-1322	Meter set cam	1
58	026-1120	Battery contact	1
59	026-1015	Battery contact base	1
60	637-2852	Screw S81-172852H	2
61	017-1023	Battery box	1
62	017-3509	Rewind shaft spring	1
63	017-2331	Rewind shaft case screw	1
64	017-1024	Battery box plate	1
65	017-2327	Rewind shaft case screw	1
66	017-1105	Rewind shaft case	1
67	627-4052	Screw S73-174052H	1
68	017-1332	Rewind shaft	1

69	627-2852	Screw S73-172852H	1
70	627-5052	Screw S73-175052H	2
71	017-5027	Resistor plate A	1
72	017-1104	Light meter assembly	1
73	017-3508	Meter set bar spring	1
74	017-1022	Meter set bar spring hook	1
75	614-2052	Screw S71-142052H	2
76	011-2373	Strap lug stopper screw	2
77	011-1528	Strap lug	2
78	011-1364	Bayonet ring	1
79	610-3555	Screw S71-203555H	3
80	011-1365	Flange	1
81	017-2380	Front cover pin	1
82	017-1101	Front cover	1
83	610-1852	Screw S71-201852H	2
84	610-3052	Screw S71-203052H	2
85	011-1478	Tripod hole	1
86	627-5552	Screw S73-175552H	2
87	011-2762	Self lever screw	1
88	011-1058	Self lever	1
89	017-1763	Shutter button base assembly	1
90	637-2853	Screw S81-172853H	3
94	637-2853	Screw S81-172853H	3
95	011-1060	Self timer gear assembly	1
96	017-1073	Leatherette complement plate	1
100	001-2761	Counter name screw	3
101	017-5010	Counter name	1
102	017-2305	Bounce stopper nut	1

103	017-1306	Bounce stopper spacer	1
104	017-1307	Counter gear plate assembly	1
105	017-3504	Counter stop spring	1
106	017-2396	Counter name advance pawl screw	1
107	017-1005	Counter name advance pawl assembly	1
108	017-3505	Counter name set spring	1
109	617-2852	Screw S71-172852H	2
110	617-2852	Screw S71-172852H	1
111	637-3552	Screw S81-173552H	2
112	017-1015	Slow speed cam	1
113	011-1004	Speed change cam	1
114	011-1045	Click plate	1
115	017-1321	High speed cam	1
116	627-4052	Screw S73-174052H	1
117	011-1006	Selector contact base assembly	1
118	017-1014	Selector contact lever	1
119	017-3506	Selector contact lever spring	1
120	627-4052	Screw S73-174052H	1
121	017-1013	Shutter speed dial base assembly	1
122	011-2347	Shutter speed dial base screw	1
123	011-1346	First blind gear nut	1
124	011-1037	Speed adjust cam	1
125	011-1038	Speed adjust cam washer	1
126	011-2372	Blind gear stopper screw	1
127	011-1121	Blind gear stopper	1
128	011-1085	Bounce stopper	1
129	011-2421	Gear plate screw	1
130	011-1612	Upper clutch gear	1
131	011-2323	First blind gear screw	1
132	011-1605	First blind gear	1
133	017-3501	Ratchet wheel spring	1
134	017-1301	Ratchet wheel assembly	1
135	011-3514	Ratchet wheel pawl spring	1
136	011-1606	Ratchet pin gear No.1	1
137	017-1002	Send lever B	1

138	011-3509	Winding stop pawl spring	1
139	017-2316	Send lever B shaft	1
140	627-2852	Screw S73-172852H	1
141	011-1077	Winding stop pawl assembly	1
142	017-2304	Winding gear plate screw	1
143	011-1101	Winding gear plate assembly	1
144	610-4052	Screw S71-204052H	2
145	011-2399	Take-up idle gear screw	1
146	011-1607	Take-up idle gear	1
147	017-3503	Advance pawl spring	1
148	017-2315	Advance pawl spring hook	1
149	011-1035	Shutter lever assembly	1
150	011-3504	Shutter lever spring	1
151	001-2384	Second blind hook screw	1
152	011-1027	Second blind hook assembly	1
153	624-3052	Screw S73-143052H	1
154	017-5008	Film indicator	1
155	017-1009	Film indicator post	1
156	637-2052	Screw S81-172052H	2
160	627-2852	Screw S73-172852H	1
161	017-5070	Resistor plate B	1
162	627-2852	Screw S73-172852H	2
163	011-1189	FP contact base assembly	1
164	627-4052	Screw S73-174052H	2
165	017-1066	Source switch contact assembly	1
166	017-1066	Source switch contact base	1
167	017-2370	Source switch lever screw	1
168	017-1065	Source switch lever	1
169	017-2372	Source switch lever post	1
170	011-2560	Mirror stop A clutch screw	1
171	011-2558	Mirror stop A clutch	1
172	011-2559	Mirror stop A clutch post	1

173	011-2557	Mirror box C screw	1
174	011-1223	Crank release spring	1
175	011- : :	1.5 E-Ring	1
176	011-1234	Release stop B lever assembly	1
177	011-3529	Release stop B spring	1
178	627-2852	Screw S73-172852H	2
179	011-1227	Crank shaft vibration stopper	1
180	011-2367	Crank shaft screw	2
181	011-2477	Crank shaft assembly	1
182	011-2432	Release stop cam screw	1
183	011-1237	1.9 E-Ring	1
184	011-2432	FP contact cam screw	1
185	011-2572	Main cam screw	4
186	011-2565	Crank cam screw	3
187	011-2367	Crank release B screw	1
188	011-3512	Crank release pawl spring	1
189	011-2372	Crank release C screw	1
190	011-2557	Crank release C assembly	1
191	011-3513	Lock lever spring	1
192	017-2374	Rewind button lever screw	1
193	017-1094	Rewind button lever	1
194	011-2571	Sprocket gear pin	1
195	011-1618	Sprocket gear	1
196	011-3531	Sprocket spring	1
197	011-1468	Sprocket shaft	1
198	011-3510	Ratchet pawl spring	1
199	011-2367	Slow lever B screw	1
200	011-2376	Ratchet pawl screw	1
201	011-1163	Slow lever B	1
202	011-2380	Eccentric ratchet pawl	1
203	011-1075	Ratchet pawl	1
204	011-1622	Crank charge pinion	1
205	011-1209	Release stop ratchet ring	1
206	627-2852	Screw S73-172852H	2
207	011-1129	Gear plate lower assembly	1

208	017-1107	Body	1
209	011-1571	Sprocket	2
210	011-2572	Sprocket stop pin	1
211	011-1610	Spool shaft gear A	1
212	011-6090	Spool	1
220	627-2852	Screw S73-172852H	1
221	617-2852	Screw S71-172852H	1
222	011-1185	X contact base assembly	1
223	617-4553	Screw S71-174553H	2
224	627-4052	Screw S73-174052H	1
225	017-3510	Needle stop spring	1
226	017-2343	Teeth saw screw A	1
227	017-2344	Teeth saw screw B	1
228	017-1044	Needle stop lever	1
229	011-2396	Teeth saw screw	2
230	017-1043	Teeth saw	1
231	017-1042	Teeth saw lever	1
232	017-2347	Revision lever screw	1
233	017-3512	Revision lever spring	1
234	017-2348	Revision lever guide shaft	1
235	017-1045	Revision lever assembly	1
236	614-2052	Screw S71-142052H	1
237	017-5049	Switch print base	1
238	614-2053	Screw S71-142053H	2
239	017-1041	Warning plate	1
240	021-2512	Warning mark plate screw	1
241	017-1038	Warning mark	1
242	017-1040	Warning mark plate	1
243	017-1039	Warning slide plate	1
244	021-2446	Mirror frame control screw	4
245	021-1120	Mirror frame control A (Right)	1

246	021-1120	Mirror frame control A (Left)	1
247	021-2469	Mirror stopper screw	2
248	011-4302	Reflex mirror	1
249	021-1040	Mirror hold spring A	1
250	021-1126	Mirror hold spring B	1
251	021-1124	Mirror hold nut	1
252	021-1122	Mirror frame assembly	1
253	021-3546	Mirror lever BC spring	1
254	017-1035	Mirror lever assembly	1
255	011-1212	1.2 E-Ring	1
256	021-3545	Mirror lever B spring	1
257	011-3525	Mirror lever stop spring	1
258	011-2473	Mirror lever stop screw	1
259	011-1144	Mirror stop A	1
260	011-1235	Mirror stop A screw	2
261	017-1075	Mirror frame stopper A	1
262	017-2349	Revision lever spring pin	1
263	017-1102	Mirror box	1
264	017-2350	Mirror frame stopper	1
265	001-2761	Stopper spring pin	2
266	017-3519	Mirror frame stopper spring	2
267	017-1076	Mirror frame stopper B	1
268	011-2490	Release arm lever screw	1
269	011-1228	First blind release arm assembly	1
270	011-1212	1.2 E-Ring	1
271	017-2376	Slide lever B screw	1
272		Spring washer	1
273	017-1050	Slide lever B	1
274	017-2355	Slide lever B shaft spacer	1
275	627-2553	Screw S73-172553H	1
276	017-1052	Slide lever bush B assembly	1
276	017-1053	Slide lever bush A	1
279	017-2356	Slide lever A shaft	1
280	627-2553	Screw S73-172553H	1

281	627-2852	Screw S73-172052H	1
282	627-2852	Screw S73-172052H	1
283	614-1553	Screw S71-141553H	1
284	017-1100	Under light baffle	1
290	017-2327	CDS base screw	2
291	017-6011	CDS base	1
292	011-4308	Eye-piece lens	1
293	627-4052	Screw S73-174052H	2
294	021-1111	Prism hold screw	1
295	021-1111	Prism hold plate	1
295	011-4307	Penta prism	1
297	017-1034	Diaphragm indicate plate	2
298	017-4340	Diaphragm indicate	1
299	627-4052	Screw S73-174052H	2
300	017-1103	Prism plate	1
301	017-2307	Pint control screw A	4
302	017-1072	Dust shield	1
303	614-2052	Screw S71-142052H	4
304	017-1071	Fresnel hold	2
305	017-1032	Upper fresnel frame	1
306	017-4337	Conda lens	1
307	017-1033	Field mask	1
308	011-4303	Fresnel lens	1
309	017-1031	Fresnel frame	1
310	017-2300	Pint control screw B	1
311	017-1051	Light baffle plate (upper)	1
312	624-2053	Screw S73-142053H	2
313	017-1052	Light baffle plate (lower)	1
314	017-1053	Screw S73-175552H	2

320	011-1033	Slow lever assembly	1
321	017-3514	F-release stopper A spring	1
322	637-3553	Screw S81-173553H	1
323	017-1055	Release lever assembly	1
324	017-3523	Clutch lever spring	1
325	017-3511	Slide lever spring	1
326	011-2367	Release plate B screw	1
327	011-1413	Clutch gear shaft	1
328	011-1025	Release plate A	1
329	011-1613	Lower clutch gear	1
330	011-1614	Second blind gear	1
331	011-3516	First blind stop spring	1
332	011-2425	First blind stop screw	1
333	011-1026	First blind stop	1
334	011-2379	Slide plate screw	1
335	011-1039	Slide plate	1
336	011-1330	Slide plate shaft	1
337	011-1212	1.2 E-Ring	2
338	617-2852	Screw S71-172852H	2
339	017-1025	Upper drum bearing plate	1
340	011-1566	First blind pinion	1
341	011-1567	Second blind pinion	1
342	001-2384		1
343	011-1024	Gear plate assembly	1
344	011-3521	Release shaft spring	1
345	011-1457	First blind drum A	1
346	011-2459	Drum screw	2
347	011-1455	Guide drum	1
348	011-1458	First blind drum B	1
349	011-1203	Second blind	1
350	011-1451	Wind up drum	1
351	011-2459	Drum screw	1
352	011-1202	First blind	1
353	011-1460	Guide roller	1
354	011-1451	First blind drum assembly	1

355	011-1568	Second blind drum assembly	1
356	011-3501	Main lever spring	1
357	011-2355	Main lever screw	1
358	011-1260	Main lever assembly	1
359	011-3533	Main lever AB spring	1
360	011-2492	Mirror gear screw	1
361	011-1619	Mirror gear	1
362	011-2494	Mirror gear shaft	1
363	627-3552	Screw S73-173552H	1
364	017-1026	Bottom drum bearing plate	1
365	011-2760	Main lever stopper	1
366	624-3052	Screw S73-143052H	2
367	011-2462	Principal shaft control nut	2
368	011-1161	Principal shaft fixed plate	1
369	627-4052	Screw S73-174052H	2
370	011-1164	Governor	1

380	011-1705	Back frame ring A	1
381	000-9126	No. 6 lens	1
382	011-1704	Back frame	1
383	000-9124	No. 4 & 5 lens assembly	1
	000-9125		
384	011-1706	Back frame ring B	1
385	011-2728	Bayonet mount screw	2
386	011-2729	Bayonet mount guide	1
387	011-1741	Bayonet	1
388	017-2726	Out pin slide plate screw	2
389	017-1606	Out pin slide plate	1
390	017-1704	Support ring assembly	1
391	017-2715	Out pin slide collar	2
392	017-3801	Diaphragm slide spring	1
393	017-3804	Out lever spring	1

394	017-2704	Out pin	1
395	017-1609	Diaphragm slide arm	1
396	011-1657	Diaphragm slide arm plate	1
397	011-2739	Diaphragm slide arm screw	1
398	627-2852	Screw S73-172852H	2
399	017-1608	Out pin slide lever A	1
400	017-1606	Out pin slide lever B	1
401	017-2719	Out pin hold arm screw	1
402	017-3802	Out pin slide lever spring	1
403	017-1724	Manual ring	1
404	096-2203	Manual ring pin	1
405	016-1630	Preset ring	1
406	096-2202	Preset ring pin	1
407	021-1602	preset ring washer	1
408	011-2764	Click ball	5
409	011-1659	Click spring	5
410	001-2715	Click spring screw	5
411	017-1701	Depth of field scale	1
412	011-2749	Preset stop screw	2
413	617-2553	Screw S71-172553H	1
414	017-1611	Diaphragm cam ring spring	1
415	017-3803	Cam ring AB spring	1
416	017-1601	Diaphragm cam ring assembly	1
417	017-1703	Helical drum	1
418	021-1706	Helical drum plate	3
419	096-2471	Diaphragm set lever screw	1
420	017-1612	Diaphragm set lever	1
421	001-2775	Diaphragm operator stopper screw	2
422	017-1604	Diaphragm operator stopper	1
423	017-1705	Lens barrel	1
424	011-1734	Lens barrel ring	1
425	017-1614	Diaphragm operator B	1
426	017-3805	Diaphragm operator AB spring	1
427	017-1613	Diaphragm operator A	1
428	011-1658	Diaphragm blades	6

429	011-1713	Diaphragm operator retainer	1
430	011-1703	Middle lens frame ring	1
431	000-9122	No.2 & 3 lens assembly	1
	000-9123		
432	011-1702	Middle lens barrel	1
433	000-9121	No.1 lens	1
434	011-1701	Front lens barrel	1
435	017-1615	Helical scale leatherette	1
436	017-1723	Helical scale	1
437	016-1628	Front lens barrel ring	1
438	011-2576	Helical scale screw	1
439			1